

# 2010S2

## FM TUNER

### Quick Start Mods

Thank you for purchasing the Exposure 2010S2 FM Tuner.

**Before you start**  
Contents:



Exposure 2010S2 FM Tuner



Mains cable



HS-101 Exposure System Remote Control (batteries included)



Please note that your Exposure 2010S2 FM Tuner may take up to 48 hours to "run-in" before reaching its optimal performance. Each subsequent "run-in" will then take about 30 minutes.

For optimum performance, use Exposure speaker cables with your Exposure equipment.

## 1 Installation



a) Connect the mains cable to the IEC mains input socket.



b) Connect to the mains outlet on the wall. DO NOT switch on until all input and output connections are made.

## 2 Amplifier Connection

The Exposure 2010S2 FM Tuner : Back View



### Analogue Output

- Connect RCA Phono sockets to appropriate line input on the amplifier.
- Make sure right and left channels are properly connected. (Right channel is marked in red)



### Antenna

- For best performance connect to a roof mounted antenna or cable distribution system.

## 3 Operation

Ensure that the volume control knob or your amplifier is set to minimum.

The Exposure 2010S2 FM Tuner : Front View



• Press power switch.

• The LED power indicator will light up.

• The display will illuminate.


## 4 Function Controls



- << Manual** Tune down one step, press and hold for SEEK tuning
- Manual >>** Tune up one step, press and hold for SEEK tuning
- Previous** Previous preset in list (in MENU mode, Previous item in list)
- Next** Next preset in list (in MENU mode, Next item in list)
- Menu** Press to enter MENU mode, Press NEXT or PREVIOUS for desired item, Press DISPLAY to select and press MENU again to exit
- Display** Press for display ON/OFF (in MENU mode select desired item)

## 5 Remote Control

Press the black Tuner button on the remote control before using the grey function buttons, otherwise the remote will not operate the FM Tuner.

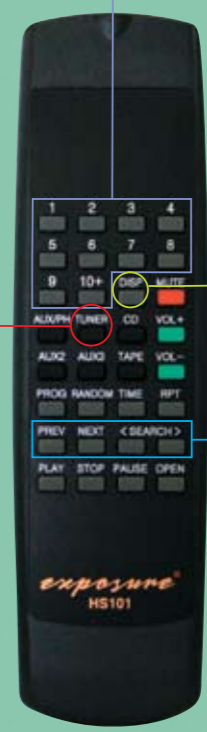

1~9,10+ Presets stations 1 to 18. Press +10 first followed by 0-8 to select presets 10-18

Display Press once to turn display off. The display will stay off until another button is pressed. Press again to turn it back on.

PREV Select Previous preset  
NEXT Select Next preset  
<SEARCH> SEEK tune up or down

## Exposure 2010S2 FM Tuner: Extended Set-Up

Press << MANUAL or MANUAL >> to tune one frequency step, press and hold to enter SEEK mode. Tuning will stop at next available station

PREVIOUS or NEXT press to select stored preset from list. There are 18 possible presets. In MENU mode use to select the desired item.

MENU Press to enter menu, press again to exit.

Menu items:  
SIGNAL LEVEL - press DISPLAY to select, press MENU to exit

PRESETS 1-18 - Press DISPLAY to select. Use the << MANUAL or MANUAL >> to tune, NEXT or PREVIOUS to select desired preset number, press DISPLAY to store and MENU to exit

ANT/ CABLE - press DISPLAY to change, press MENU to exit

STEREO/ MONO - press DISPLAY to change, press MENU to exit

DISPLAY: Press to turn display off, press again to turn on. In MENU mode press to select or change desired item

## Safety

Incorrect installation or inappropriate use of the Exposure 2010S2 FM Tuner may result in injury due to electrical shock.

- Ensure that the voltage rating on the rear panel of this unit matches that of your local mains supply.\*
- Ensure that the mains cable and plug supplied with this unit is also correct (Contact your dealer immediately if this is not the case).
- This unit is protected by a mains fuse, which is accessible as part of the IEC socket on the rear panel.
- Fuse replacement specifications:  
220/240V units T630mA fuse  
110/120V units T1.25A fuse
- The Exposure 2010S2 FM Tuner MUST be earthed.
- Protect unit against all forms of liquid. Never expose unit to dripping or splashing, or place objects filled with water, such as vases, on the unit.
- Unplug unit from mains when not in use for prolonged periods.
- Do not open this unit - there are NO user serviceable parts inside.
- Reduce the amplifier volume control to minimum before turning this unit on or off.
- Ensure that this unit is switched off when connecting or disconnecting interconnect cables.

\* Contact Exposure Electronics for advice on moving your equipment to another country or territory.

## Caution

For a long and trouble-free life of your Exposure 2010S2 FM Tuner, please ensure the following:

- Do not remove the cover of the FM Tuner or dismantle the case.
- Protect unit against all forms of liquid. Never expose unit to dripping or splashing, or place objects filled with water, such as vases, on the unit.
- Do not operate the FM Tuner in a damp environment or allow liquids to enter the unit.
- Do not attempt to bypass the mains fuse or replace the fuse with one of a different specification.
- Do not use abrasive or solvent-based cleaning fluids on the FM Tuners case.

Failure to observe these precautionary measures may void your warranty.

## Technical Specifications

Output Level:	700mV for 75KHz deviation, 1KHz
Frequency Response:	20Hz, -1dB, 15KHz, -3dB, ref 1KHz
Antenna:	75 ohms
Tuning Range:	87.5 - 108MHz in 50KHz steps
Mains Supply:	110/120V or 220/240V, 50/60Hz (factory set)
Power Consumption:	<25 VA
Dimensions (H x W x D):	90 mm x 440 mm x 300 mm
Nett Weight (Unpacked):	5 kg
Gross Weight (Packed):	7 kg

## Exposure Warranty Policy

1. The Exposure warranty entitles you to FREE repair of this unit for the first three (3) years from the date of purchase.
2. This warranty is valid only if the unit is purchased from an authorised Exposure dealer, registered with the authorised agent in your country of residence and issued with a recognised warranty card.
3. The agent accepts no responsibility for defects arising from accident, misuse, abuse, wear and tear, neglect or through unauthorised adjustment and/or repair or replacement of any components, nor will they accept responsibility for damage or loss occurring during transit to or from the person making a claim under the warranty.
4. The Exposure warranty covers:
  - Parts and labour costs for three (3) years from the date of purchase. Please retain your original receipt as proof of purchase and purchase date. The guarantee is extended only to the original purchaser and is not transferable.

### When making claims under this warranty:

1. The equipment should be suitably packed and returned to the dealer from whom it was purchased, or directly to the local distributor, together with proof of purchase or a copy of the dated sales receipt.
2. If necessary the unit should be sent carriage pre-paid by a reputable carrier - NOT by post.
3. No responsibility is accepted for the unit whilst in transit to the dealer or agent, and customers are advised to insure the unit against loss or damage whilst in transit.
4. The warranty card MUST be produced when making claims against this guarantee.
5. Any tampering or alteration made to the warranty card or to the serial number on the equipment will invalidate the warranty.
6. The dealer or the agent shall notify the customer when the repairs have been completed. The customer must claim the goods within fourteen days from the date of notice, failing which; the Company reserves the right to impose storage charges.
7. The Company reserves the right to dispose of the equipment after 90 days from the date of notice in a manner that it sees fit and without compensation to the customer.